LOADMASTER

Condustrial Scales



Our platforms have applications in weight counting, meat process, air cargo, shipping/receiving, process control and miscellaneous checkweighing just to name a few. Loading accomplished via hand truck, forklift and/or overhead crane.

Available in capacities:

2,000 lbs. to 30,000 lbs.

Standard Sizes:

2' x 2' up to 8' x 10'

420 E. Lincoln Street Findlay, OH 45840

Phone: 1-800-637-3326 Fax: 419-422-9036

Website: loadmasterscale.com

Email: loadmaster@loadmasterscale.com

COC 91-093A2 The Loadmaster Series "LP' is a low profile, full frame electronic industrial scale. (not a foot scale)

These platforms have applications in weigh counting, meat processing, air cargo, shipping/receiving, process control and miscellaneous checkweighing just to name a few. Loading accomplished via hand truck, forklift and/or overhead crane.

Ruggedly designed to take the abuse found in so many industrial applications. Standard deck is 5/16" checkered plate for light capacity and 3/8" checkered plate for high capacity (smooth deck standard for stainless steel models). Each scale is painted with a high quality zinc chromate primer and finished coated with a durable enamel.

Optional:

- 1. Hot dip galvanized
- 2: Epoxy paint
- 3. Stainless construction

Installation is in most cases as simple as setting in place and using. Mounting holes are provided if a more permanent installation is desired.

Optional:

- 1: Drive on ramps, 1 to 4 sides.
- 2: Forklift channels for maximum portability.
- 3: Self-contained "ready to pour" pit frame.
- 4: Bumper guards to stop your fork lift from running into the scale.

Scale design utilizes a self-centering floating ball and cup load cell mounting arrangement. Adjustable bumper bolts are provided to restrict lateral travel and prevent structural damage. Tie down studs and eyebolts are provided for shipping and/or moving the scale. The nuts on these studs can be loosened and left in place when installing the scale. If adjusted properly the nuts will restrict vertical platform travel in the event of side impact. This saves on down time and protects your investment.




Industrial applications imply harsh surroundings and Loadmaster recognizes this. The series "LP" is designed for industrial environments with sealed load cell and a wash down Junction box as standard. Optional stainless steel load cells or hermetically sealed load cells. The junction box is built in the deck on 2000 lbs. to 10000 lbs. models and remote on the 20000 lbs. to 30000 lbs. models. Optional, can be remotely located on the lower capacity models if specified when ordering.

Access to all load cells and wiring is as simple as removing four nuts and lifting platform. No special tools or complicated disassembly involved.

Accuracy will be set forth in Handbook 44, Class III L. (NTEP approved Class III/IIIL)

All Loadmaster products are warranted against manufacturing defects for a period of one year.

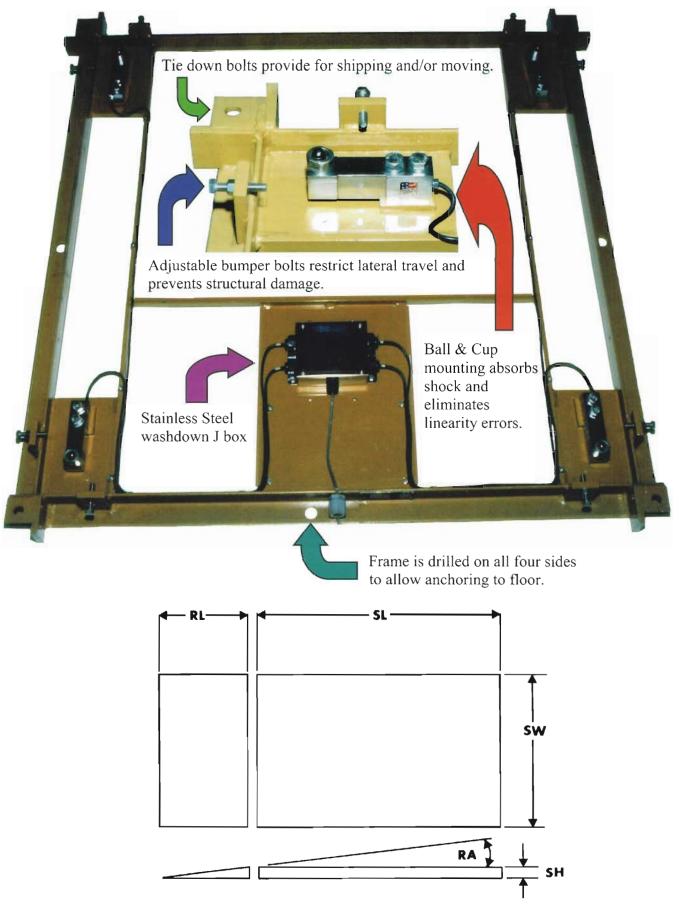

Refer to next page for specifications


Refer to drav	ving on previo			Shippin	g Weight				
Part #	Capacity	Load cell	SH	SW	SL	Scale	Ramp	RL_	RA_
135 -3201-	2,000#	1,000#	3-3/4"	24"	24"	290#	190#	30"	7.18 Deg
-3203-				36"	36"	390#	390#		
-3205-				48"	48"	600#	340#	30"	7.18 Deg
-3501-	5,000#	2,500#	3 3/4"	36"	36"	390#	260#		
-3503-				48"	48"	600#	340#		
-4101-	10,000#	4,000#	3-3/4"	48"	48"	630#	560#	30"	7.18 Deg
-4103-				60"	60"	890#	650#		
-4105-				60"	84"	1120#	650#		
-4106-				72"	72"	1190#	770#		
-4108-				72"	96"	1630#	770#		
-4201-	20,000#	10,000#	5-1/4	48"	48"	750#	560#	48"	6.27 Deg
-4203-				60"	60"	1030#	650#		
-4206-				72"	72"	1500#	770#		
-4208-				72"	96"	1950#	770#		
-4301-	30,000#	10,000#	6-1/4	60"	60"	1388#	528#	60"	5.97 Deg
-4304-				72"	72"	1806#	650#		
-4306-				72"	96"	2293#	650#		
-4307-				96"	120"	2900#	844#		

-9 **Painted Mild Steel**

Stainless Steel -1

-2 Hot Dip Galvanized The above list shows some of our most popular sizes and capacities. Custom sizes are available in most cases at no extra charge.

Part # example: 135-3503-1 is a 5000 lb. Low Profile Scale, 48" x 48" deck, Stainless Steel const.

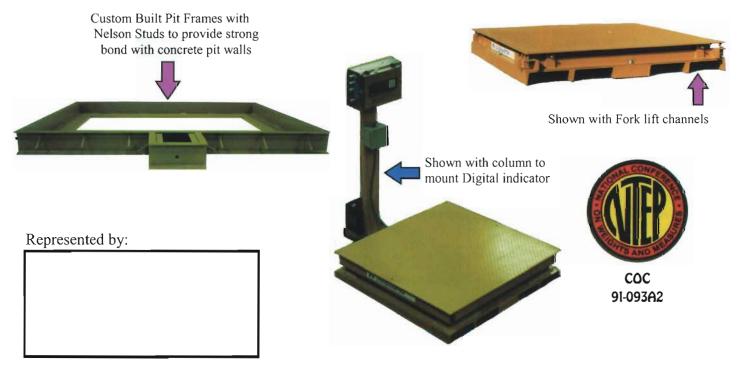



420 E. Lincoln Street, Findlay, Ohio 45840, 419 422 4779 Division of Holtgreven Scale & Electronics Corp.

SCALE MFG. -

STATEMENT OF WARRANTY

LOADMASTER warrants to the original purchaser that any part of a LOADMASTER product, which in LOADMASTER'S judgement, is defective in material or workmanship will be repaired or replaced. This covers parts for a period of one (1) year and labor for ninety (90) days from date of shipment. This warranty does not apply to:

- Any equipment which is not installed in accordance with LOADMASTER specifications and/or recommendations.
- 2. Any routine maintenance such as lubrication or periodic adjustments and calibration.
- 3. Any equipment damaged by abuse Acts of God, including (but not limited to) lightning, flood, earthquakes, hurricanes, etc.

420 F. Lincoln St., Findlay, Ohio 45840, Phone 419/422-4779 FAX: 419/422-9036

SCALE MFG.

PAGE 2

MODEL	#	SERIAL	#			
DESCR	IPTION'X',					
SHIP I	DATE	J08#				
CUSTO	MER NAME					
ADDRES	SS					
CITY	along after state while was required to the state of the	STATE	ZIP.			
I.	INDICATOR MODEL #			SERIAL	#	
II.	PRINTER MODEL #		~	SERIAL.	#	
III.	MISC. ACCESSORIES					
IV.	LOAD CELL MODEL #				TY	
	SERIAL #					
V	BILL OF MATERIALS-	(Atta	ch capy a	f packi	ng list)	

INSTALLATION OF LOADMASTER LOW PROFILE INDUSTRIAL SCALES

- 1. After unpacking scale from the shipping crate, set the scale in the area that it is going to be used.
- 2. Loadmaster 20,000# capacity and under Low Profiles will require the following work before installation:
 - A) The ball cups and balls have been removed to prevent damage to load cells in shipping. The ball cups and balls will need to be installed.
 - B) After deck is set in place, four (4) 1/2" nuts will need to be installed on the tie-down bolts. Use extreme caution. They cannot be any tighter than finger tight to avoid possible damage to load cells.
- 3. The floor in this area should be level. If the scale shows signs of tippage, (one corner not making contact with the floor) the scale will need to be shimmed. Using a shim 12" x 12" x the thickness needed, place under the corner.
- 4. After the scale has been shimmed, loosen the four tie-down bolts. (one per corner)
- 5. Re-check the scale for tippage. Re-shim if needed.
- 6. Install the scale's main cable connector in the back of the digital.
- 7. Plug the digital into an isolated 110 VAC power line.
- 8. Your LOADMASTER scale has been factory sealed and should require no field adjustments. (If digital is bought from Loadmaster only.)
- 9. If your scale requires field calibration, we have made this simple through our summation box located outside the platform. (inside on non-hostile) Inside the box, you will find a board numbered 1-4 for individual corner adjustment. Follow these four steps for a simple calibration.

Note: Installed in deck on Non-Hostile and Load-Pro Models

- A) Place any known weight not exceeding the sectional capacity or less than 500# one corner at a time recording the weight displayed on the digital.
- B) After all four corners have been recorded, you adjust all corners to the lowest reading.


Example 1) Corners (1) 1000 (2) 1001 (3) 1000 (4) 1002


Adjust corners 2 and 4 to read the same as 1 and 3.

Example 2) Corners (1) 995 (2) 999 (3) 999 (4) 1000

Adjust corners 2, 3, 4 to read the same as 1.

- C) After three corners are adjusted to read the same, place the weight in the center of the scale.
- D) Refer to the Digital Owners Manual as to the location of the span pots. Adjust the overall calibration of the scale.
- 10) The scale is ready for use.
- 11) If the scale needs to be moved in the future, tighten tie down bolts (finger tight only) before attempting to move. Install lifting rings that are supplied with scale. Disconnect or secure digital. Refer to Step 3.

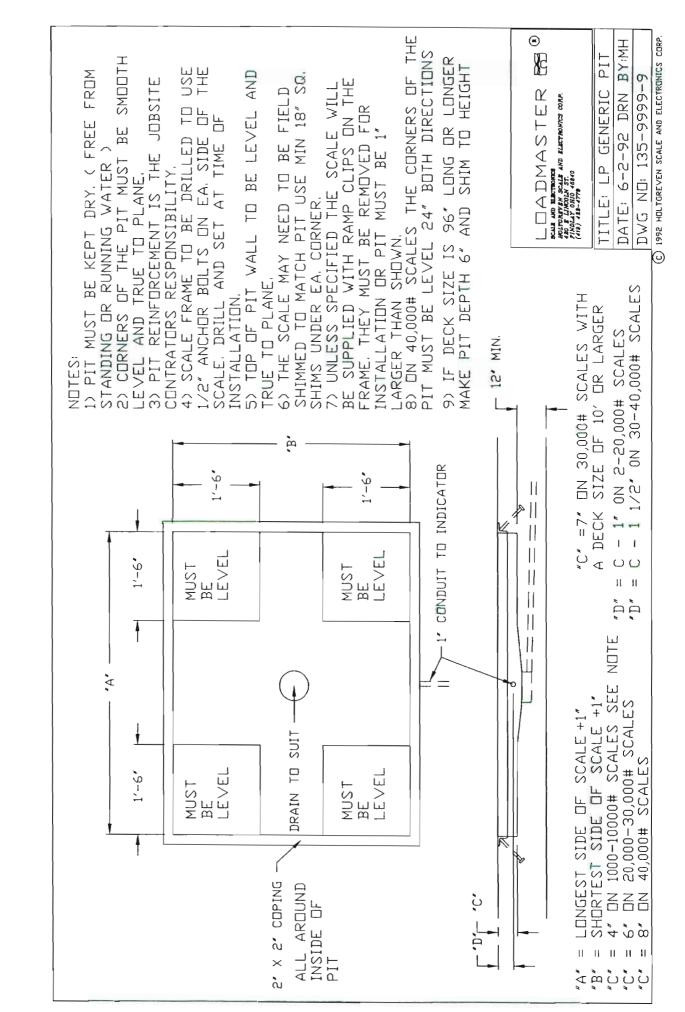

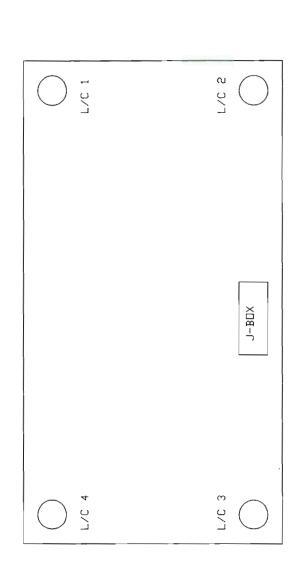

LOAD CELL SPECIFICATIONS

10K OR 5K CAPACITY EXCITATION VOLTAGE 20VDC MAX RATED OUTPUT 3 mv/v +/- .25% SAFE OVERLOAD 150%

WIRING +EXC, RED -EXC, BLACK +SIG, GREEN -SIG WHITE THIS IS THE WIRING FOR ALL LOADMASTER SCALES SOLD WITH LANTECH STRETCH WRAPPERS.



20 Ohm CDRNER ADJUSTMENT POTS

00000

00000

00000

00000

s 1

ø

ө

ר/כו פ

E2\1

0

2\N \(\frac{1}{2}\) FKD \(\frac{1}{2}\) \(\frac{1}\) \(\frac{1}{2}\) \(\frac{1}2\) \(\frac{1}2\) \(\frac{1}2\) \(\frac{1}2\) \(\frac{1}2\) \

0


MDUNTING HOLES #6 BOLT INSIDE OF STAINLESS STEEL ENCLOSURE

LDAD CELL CONNECTIONS-

BELDON 8723 2 PAIR CABLE TO INDICATOR

P/N 343-2014-1

0

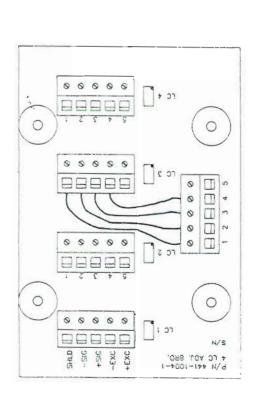

HOSTILE LOW PROFILE INDUSTRIAL.
USE REVERE SSB L/C
GRN +EXC
BLK -EXC
WHT +SIG
RED -SIG
ORG OR BARE SHLD

 NON-HOSTILE LOW PROFILE INDUSTRIAL

 FRANSDUCER L/C
 SENSORTEONICS L/C

 RED
 +EXC
 GRN
 +EXC


 BLK
 -EXC
 GRN
 -EXC

 GRN
 +SIG
 WHT
 +SIG

 WHT
 -SIG
 RED
 -SIG

 BARE
 SHLD
 BARE
 SHLD

NOTE: SENSORTRONICS LC'S ARE MOUNTED UPSIDE DOWN SO THE SIGNAL WIRES ARE REVERSED

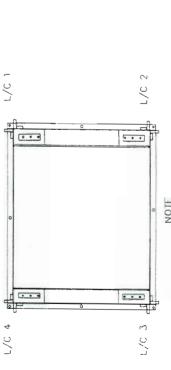

ON NON-HOSTILE SCALE MAIN CABLE EXITS FRAME THIS SIDE ON HOSTILE SCALE L/C CABLE TO JUNCTION BOX EXITS FRAME THIS SIDE

SCALE: N/A

SCALE:

O 166 1-21 SECON SCALE AND EXCEMENTS COM

80r

LOADMASTER® LOW PROFILES

Replacement parts list



Spherical ball cup used in Most All decks of Low Profiles 1K through 30K P/n 412-3008-1



Threaded ball cup used with Square shear beams 1k-5k SE Standard for Low profiles 1k-10k P/n 412-3016-0



Stainless steel ball bearing standard in all Low Profiles 1k-30k capacities P/n 575-1001-0



4k shear beam load cell
Used in most 10k low profiles
P/n 124-3405-0



Summation Card used in all Low Profile Scales P/n 343-2014-1

LOADMASTER® LOW PROFILES

Replacement parts list



Ball Cup ¾" Threaded Used in most 20K decks And some 10K decks P/n 412-3017-0



10K Shear beam load cell Used in 20K Scales P/n 124-4105-0



5KSE shear beam load cell Used in some large platform size 10K scales P/n 124-3503-0



Spherical Bail cup 1/4" tall Used in Special 3" tall scale P/n 412-3004-1



J-Box used in scales

1k-10k with in deck adjustment
P/n 241-1041-2 with board
P/n 234-1006-1 box only





"a preferred name in load cell technology"

Model 30310





Rectangular Shear Beam Load Cell

FEATURES:

- · Model 30310 threaded hole
- · Model 30210 through hole
- 250 to 20K pounds capacities
- Complete environmental protection
- · Stainless Steel versions available
- NTEP certified versions available for class III / III L 5000 divisions
- Factory Mutual (F.M.) Approved †

NTEP C.O.C. #87-058A6

DESCRIPTION:

A versatile Load Cell designed for multiple use in low profile and platform scales, and in tank, bin, and hopper weighing systems. The high alloy steel construction ensures durability and precision performance. The cell is environmentally protected with waterproof seal and is nickel/chrome plated to assure resistance against corrosion. Mounting plates are also available (see accessories).

PERFORMANCE SPECIFICATIONS

Standard Capacities (lbs.): *250, *500, 1K, 2K, 2.5K, 3K, 4K, 5K, 5KLE, 10K, 15K, 20K

Excitation Voltage: 10VDC - Maximum 15VDC

Rated Output: 3.0 my/v + .25%

Non-Linearity: < 0.03% FSO (Full Scale Output)

Hysteresis: < 0.02% FSO Non-Repeatability: < 0.01% FSO Zero Balance: ±1.0% FS0

Bridge Resistance: 350 ± 3.5 ohms

Safe Overload: 150% of Rated Capacity

Temperature:

Compensated Range: 0 - 150 deg. F


Effect on Output: < 0.0008% FSO/deg. F **Effect on Zero:** < 0.0011% FSO/deg. F

Finish:

Electroless Nickel/Chrome Plated





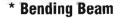

Model 30310



SHIELD

CAPACITY LBS.	PART NO.	A	В	С	D	Е	F	G	Н	I THREADS	
250 - 5K	30310 - XX	5.12	1.25	1.25	.53	.60	1.00	3.00	.60	1/2-20 UNF - 2B	
5KLE - 10K	30310 - XX	6.75	1.50	1.50	.78	.75	1.50	3.75	.75	3/4-16 UNF - 2B	
15K - 20K	30310 - XX	8.75	2.00	2.00	1.03	1.00	2.00	4.75	1.00	1-14 UNF - 2B	


ELECTRICAL TERMINATION


INPUT OUTPUT

RED (+) GREEN (+)

BLACK (-) WHITE (-)

COMPRESSION POSITIVE

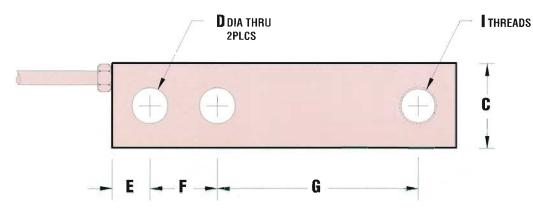

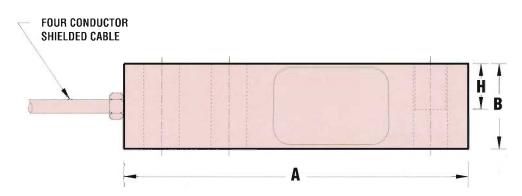

† Factory Mutual Systems approved as intrinsically safe when installed per F.M. approved installation drawing. Contact ARTECH sales department for details.

Represented by:

HOLTGREVEN
Scale & Electronics Corp.
420 East Lincoln St.
Findlay, Ohio 45840
419-422-4779

800-637-3326



1966 Keats Drive, Riverside, CA 92501

ORDER INFORMATION

- ARTECH is dedicated to maintaining adequate inventories of its Load Cells to provide the best service in the industry.
- ◆ Order by the model number and indicate the capacity required.
- Custom services such as matched load cell outputs, special threading, and custom calibrations are available on an optional basis at an extra cost.

Let us know what you need... we listen! QUALITY • PERFORMANCE • SERVICE

909-276-3331 800-654-8181 Fax: 909-276-4556

Email: artechind@msn.com

www.artech-loadcell.com





"a preferred name in load cell technology"

Model 5530610





Shear Beam Load Cell

FEATURES:

- 1K to 40K pounds capacities
- Stainless steel construction
- Hermetically sealed
- Exceed NIST H-44 requirements
- Low cost
- · Interchangeable with SSB
- · Factory Mutual (F.M.) Approved †

APPROVED

DESCRIPTION:

Effect on Zero:

Material:

Model SS30610 constructed of stainless steel, and hermetically sealed. The SS30610 load cell is an excellent choice for the toughest industrial environment. SS30610 is ideal for material processing, food processing and platform scales. Other capacities are available upon request.

PE	RFORMANCE SPECIFICATIONS
Standard Capacities (lbs.):	1K, 2K, 4K, 5K, 10K, 40K
Excitation Voltage:	15VDC
Rated Output:	2.0 mv/v ± .1% mv/v
Non-Linearity:	< 0.03% FSO (Full Scale Output)
Hysteresis:	< 0.03% FSO
Non-Repeatability:	< 0.02% FS0
Zero Balance:	±1.0% FS0
Bridge Resistance:	350 ± 1 ohms
Safe Overload:	150% of Rated Capacity
Temperature:	
Compensated Range: Effect on Output:	0 - 150 deg. F < 0.0008% FSO/deg. F

< 0.0011% FSO/deg. F

Stainless Steel

Model 5530610



CAPACITY LBS.	Α	В	С	D	E	F	G	Н	L	J	К
1K - 5K	8.00	1.44	1.88	.51	.75	2.50	3.87	.68	1.18	.47	4.00
10K	9.25	1.88	2.75	.88	.80	2.63	4.88	1.00	1.63	.62	4.62
40K	12.50	2.75	3.75	1.31	1.25	3.50	6.25	1.50	1.88	.75	6.50

ELECTRICAL TERMINATION


INPUT OUTPUT


SHIELD


GREEN (+) WHITE (+)

BLACK (-) RED

COMPRESSION POSITIVE

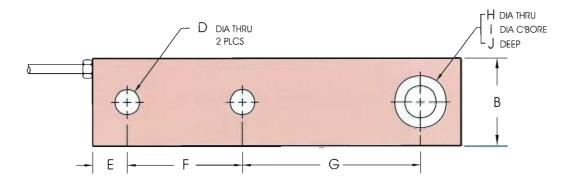

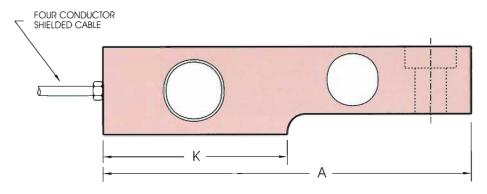

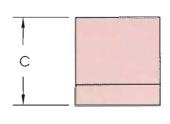

† Factory Mutual Systems approved as intrinsically safe when installed per F.M. approved installation drawing. Contact ARTECH sales department for details.

Represented by:

HOLIGREVEN Scale & Electronics Corp. 420 East Lincoln St. Findlay, Ohio 45840 419-422-4779 800-637-3326



1966 Keats Drive, Riverside, CA 92501

ORDER INFORMATION

- ◆ ARTECH is dedicated to maintaining adequate inventories of its Load Cells to provide the best service in the industry.
- Order by the model number and indicate the capacity required.
- · Custom services such as matched load cell outputs, special threading, and custom calibrations are available on an optional basis at an extra cost.

Let us know what you need... we listen! **QUALITY • PERFORMANCE • SERVICE**

909-276-3331 800-654-8181 Fax: 909-276-4556

Email: artechind@msn.com www.artech-loadcell.com

SCALE MFG.

EFFECTIVE 3/1/35

STANDARD TERMS AND CONDITIONS OF SALE

CONTRACT. ANY ACCEPTANCE BY LOADMASTER SCALE MANIFACTURING. (HEREAFTER REFERRID TO AS THE COMPANY) OF THE BUTER'S ORDER IS EXPRESSLY NUDE CONDITIONAL ON THE BUYER'S ASSENT TO ANY ADDITIONAL OR DIFFERENT TRUNS CONTAINED NEREIN. Quotations issued by the Company's discributors and agents shall not be construed as offers to sell and be binding upon Buyer's acceptance thereof unless expressly confirmed in writing by the Company's Headquarters at Findlay, Ohio. All orders are received subject to acceptance by the Company.

Headquarters at Findlay, Ohio. All orders are received subject to acceptance by the Company.

PRICES. (a) The prices shown in published price lists and other published literature issued by the Company are not offers to sell and are subject to change without notice. (b) All prices are f.o.b. place of origin.

TAXES. The Company's prices do not include any applicable sales, use, excise, or similar taxes; any such taxes which the Company may not or hereafter be required to pay or collect shall be billable to the Buyer as a separate item unless the Buyer has furnished the Company with a tax exemption certificate acceptable to the taxing authorities.

INSTALIATION. The Company's prices for equipment unless otherwise specified do not include an allowance for installation and/or final on-site adjustment. Any such service performed by the Company shall be billable to the Buyer as a separate item at the Company's then prevailing rates for the local area concerned.

local area concerned.

ADDITIONAL MITRIALS AND EQUIPMENT. The Company's prices for equipment do ADDITIONAL MITRIALS AND EQUIPMENT. The Company's prices for equipment do not include planking, concrete, steel plate or other platform copping material, weighbridges, or other structural steel, hoppers, tanks, conveyors, conveyors sections, other attachments or accessories, wring to the scale, or any material or equipment other than the scale itself, unless the Company's acceptance specifically so states.

PITS AND FOUNDATIONS. Unless the acceptance by the Company expressly includes the furnishing of scale pits or scale foundations, the Company's responsibility for such pits and foundations is limited to supplying correct drawing. Such drawings illustrate and describe pits or foundations for normal site conditions. The Company will be responsible only for prints officially issued: CEXITIED as approved for construction for the specific order.

order.

PANENT. Unless otherwise expressly stated in the Company's acceptance, payment terms are cash net 30 days from date of invoice. Amounts past due are subject to a service charge of 1 1/21 per month or fraction thereof. The Company reserves the right to restrict the terms of payment or to require payment prior to the time of shipment if, in the Company's optinion, circumstances do not variant shipment under the terms originally specified in the Contract documents.

circumstances do not warrant shipment under the terms originally specified in the contract documents.

SECURITY INTEREST. The Company shall retain a security interest in the equipment furnished by it under the contract until the full purchase price has been paid. No equipment furnished by the Company shall become a fisture by reason of heing attached to real estate. Buver's failure to pay any amounts shen due shall give the Company the right to possession and removal of the equipment. If the Company retakes the equipment, it may retain all sums theretofore paid by buver hereunder as heing for reasonable use of the

DELIVERY. Delivery dates indicated in the contract documents are approximate and are based on prompt receipt of all necessary information regarding the and are based on prompt receipt of all necessary information regarding the equipment covered by the contract. The Company vill use its best efforts to meet the indicated delivery dates, but cannot be held reaponsible for its failure to do so due to fire, war, civil commotion, strikes, failure of transportation, any Act of Cod, or other causes beyond its control. In the event of any delay in delivery caused by the Buyer, the Company vill store and handle all items ordered at the Buyer's risk and vill invoice the Buyer for the unpaid portion of the contract price, on or after the date on which the equipment is ready for delivery. This amount will become due and payable in full within 30 days from invoice date. A monthly storage and extra handling charge of 1 1/22 per month, or any fraction thereof, of the contract price covering the stored equipment shall be billable and payable as a separate item.

SHIPPING, Unless otherwise provided in the contract, the Company will select

as a separate item.

SHIPPING. Unless otherwise provided in the contract, the Company will nelect the method of transportation and routing for equipment sold f.o.b. place of origin in which case shipping damage, both visual and concealed, is the responsibility of the Bover Shipment may be made freight collect.

CHANCES. Buyer may with the express written consent of the Company make changes in the specifications for equipment or work covered by the contract. In such event the contract price and delivery dates shall be equitable adjusted. The Company shall be entitled to payment for reasonable costs and mappenses incurred by it for work and materials rendered unnecessary as a result of such changes and for work and materials required to effect said changes, plus the Company's usual profit thereon.

CANCILITION. Equipment or work which remains to be furnished under the contract may be cancelled by the Buyer only with the express written consent of the Company. In the event of such cancellation, the Company shall be entitled to payment for the reasonable costs and expense incurred by it in connection with the equipment of work so cancelled, plus an amount determined by applying the Company's usual rate of profit for similar items to such costs and expenses. The minimum cancellation charge will be 20% of the contract price.

13. STATEMENT OF LIMITED WARRANTY. The Company warrants its products to be free from defects in materials and workmanship for a period of twelve months from date of shipment to an authorized Company distributor or agent or to the original user, whichever period is shorter. This limited warranty is subject to the terms and conditions as follows:

The equipment covered by this warranty is limited exclusively to products manufactured or supplied by the Company and is valid for the original user only. This warranty is non-transferable. Should any defects in material or vorkmanship be found, the Company will repair, replace or otherwise correct such defects (at its option) at no charge to the equipment owner during normal week day working hours (8:00 a.m. -5:00 p.m.) for the first sixty (60) days. For the remainder of the warranty period the Company will provide parts and technician labor at the equipment site during normal week day working hours. The equipment owner will be invoiced for technician travel time and expenses. All technician labor will be provided by the Company, authorized distributor or agent personnel. All travel to the equipment site is based on mileage from the closest authorized distributor or dealer location. Calibration and normal closest authorized distributor or dealer location. Calibration and normal maintenance are not covered under this warranty.

Any parts or equipment to be repaired at the factory or replaced must be properly packed to prevent shipping damage and shipped prepaid to Findlay. Ohio. Repaired or replaced parts or equipment will be shipped prepaid back to the installation site or authorized distribution location. Remodies under this limited warranty shall not be available to the equipment

to the installation site of mainteried distributor accession.

Ramadies under this limited warranty shall not be available to the equipment coner if any of the following has occurred:

A. Equipment was improperly installed or operated above rated load capacity according to the Company's drawings, specifications or rating information contained on equipment data plates.

B. Equipment has been repaired or modified without the Company's authorization which in the Company's judgment has affected the performance or reliability of the product.

C. Equipment has been subject to misuse or abuse, neglect, accident, damage by fire, lightning, water or other Acts of Cod.

The company shall not be liable for consequential damages or losses of any nature resulting from the installation, use of or performance of it products including but not Ilmited to loss of profit, delays or expenses.

This limited warranty shall apply only in the contiguous 48 states of the U.S.A. and constitutes the sole warranty offered by the Company. No other warranties expressed or implied, shall be in effect including any warranty of merchancability or fitness for a particular application.

of merchantability or fitness for a particular application.

Claims for equipment damaged in transit must be referred to the freight carrier. Visible damage should be reported immediately. Concealed damage should be reported as soon as it is discovered or in any case, within fifteen (15) days of receipt of shipment, in accordance with freight carrier regulations. regulations

GENERAL. The foregoing warranties are further subject to the following general conditions:

1. If the Buyer requests the performance of warranty, work provided for If the Buyer requests the performance of warranty work provided for

under the foregoing warranties during other than normal Company work periods, the Buyer shall be required to pay for all premium time. If the Buyer requests the performance of warranty work provided for

periods, the Buyer shall be required to pay for all premium time.

2. If the Buyer requests the performance of warranty work provided for under the foregoing warranties outside of the continental United States, the Buyer shall be required to pay for the travel time, living and travel expenses of any Company personnel required to perform such warranty work.

HESE CARRANTIES ARE IN LIGI OF AND EXCLUDE ALL OTHER EMPRESS OR IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATIONS, ANY IMPLIED WARRANTY OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PRAPOSE. IN NO EVENT SHALL THE COMPANY BE LIABLE FOR SPECIAL OR CONSEQUENTIAL DAVICES, OR FOR ANY OTHER LOSS, DAYMER OR EMPENSE OF ANY KIND, INCLUDING LOSS OF PROFITS, ARISING IN CONNECTION WITH THIS AGREEMENT OR WITH THE USE OR INABILITY OF USE THE SERVICES PROVISED UNDER THIS AGREEMENT.

12. INSURANCE. The Company is insured at all locations where it undertakes business operations with the type of coverage and limits or liability thereon as follows: Workmen's Compensation — statutory: Employer's liability - \$500,000 per accident; Comprehensive Liability (Personal injury and Property Danage Liability, Automobile and other than Automobile)-1,000,000 single limit per occurrence. The Company will furnish its STANDARD insurance certificate Incorporating above coverage upon request.

15. SAFETY, It is the responsible of the User to exercise adequate safety precautions in the use of the Company's products. The Company unli be responsible for damages or injures incurred through User missure or negligence.

negligence.

16. PERMITS, RECULATORY LAWS AND OR STANDARDS. The buyer shall at its own expense apply for and obtain any permits and inspections required for the installation and/or use of the equipment furnished under the contract. The Company makes no promise or representation that its product or services will conform to any federal; state or local laws, ordinances, regulations, codes or standards, except as particularly specified and agreed upon for compliance in writing as a part of the contract between Buyer and the Company or as stated in specific literature.

17. CONTRAVENING LAW. Should any term or provision contained in the contract contravene or be invalid under applicable law, the contract shall not fail by reason thereof but shall be construed in the same manner as if such term or provision had not appeared therein.

or provision had not appeared therein.

DEFAULT. Upon default and placing of this instrument with an attorney for collection or repossession of equipment. Buyer agrees to reimburse attorney feets incurred by the Company in connection therewith.